Elevate Monitor Arm⁵⁰

PARTS AND TOOLS

A	×1 PCE		
B	×1 PCE		
C	×4 PCS	M4x10	
D	×1 PCE	M4x10	
E	×1 PCE	2mm	
F	×1 PCE	6mm	
G	×1 PCE	4mm	
H	×1 PCE	5mm	
I		NOT INCLUDED	

Follow instructions, and if there are steps that are incomprehensible, please let us know and we will get back to you. For assembly, use only prescribed tools.
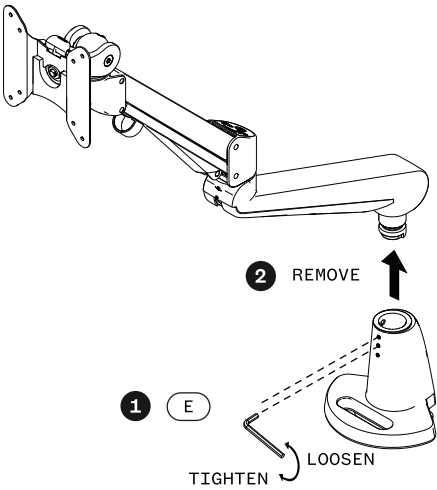
FORMINGFUNCTION.SE

FORMING ℒ FUNCTION

USER MANUAL

STEP 1

Loosen the two upper set screws in the table clamp and remove them.

Remove the arm.

Set the arm and set screws aside, they will be reinserted in STEP 3.
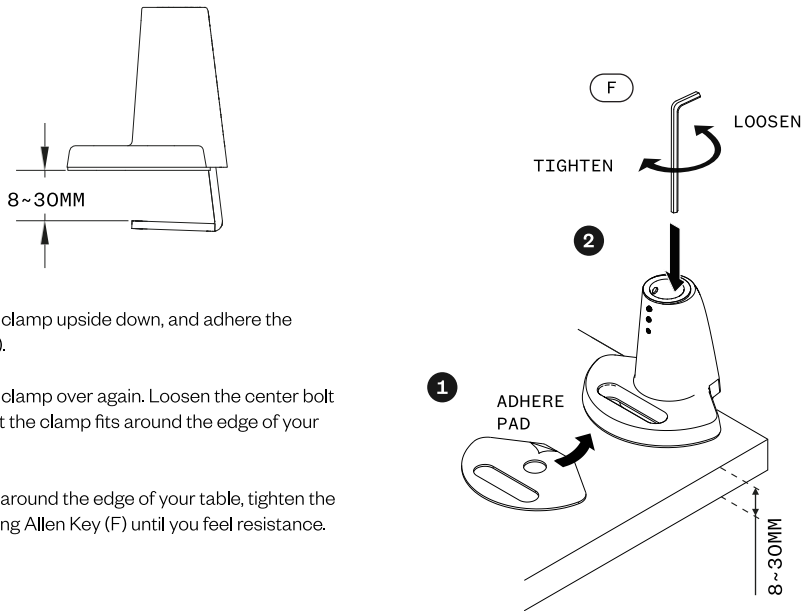
2 REMOVE

1 E TIGHTEN LOOSEN

STEP 2

8~30MM

Turn the table clamp upside down, and adhere the rubber pad (B).

Turn the table clamp over again. Loosen the center bolt enough so that the clamp fits around the edge of your table.

Once in place around the edge of your table, tighten the center bolt using Allen Key (F) until you feel resistance.
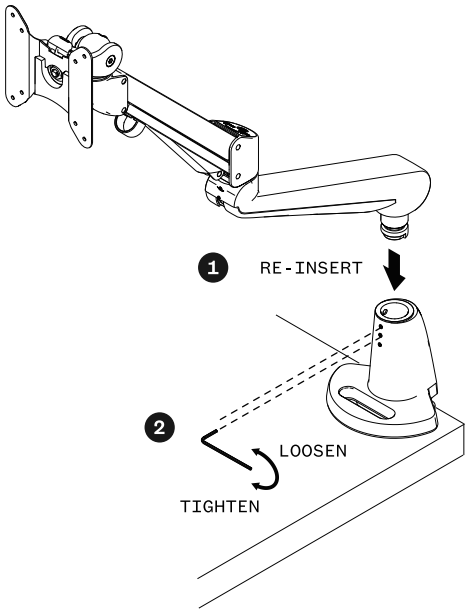
F LOOSEN TIGHTEN

2

1 ADHERE PAD

8~30MM

STEP 3

Reinsert the arm in the table clamp and reattach the set screws from STEP 1.

Tighten the middle screw fully, and then loosen it one turn.

Check that the arm cannot be removed.

1 RE-INSERT

2 LOOSEN TIGHTEN

STEP 4

Remove the VESA plate by pinching the grey plastic tab to release the lock, then pull the VESA plate upwards to separate it from the arm. Repeat for the second arm.
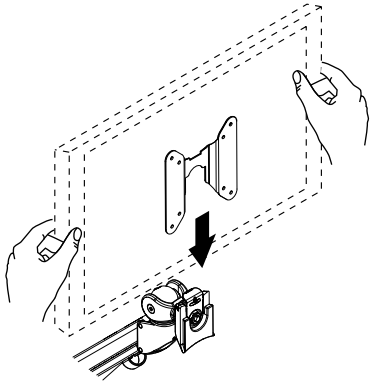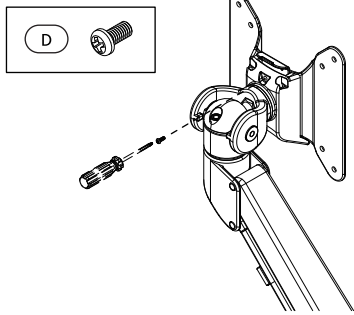
2 1
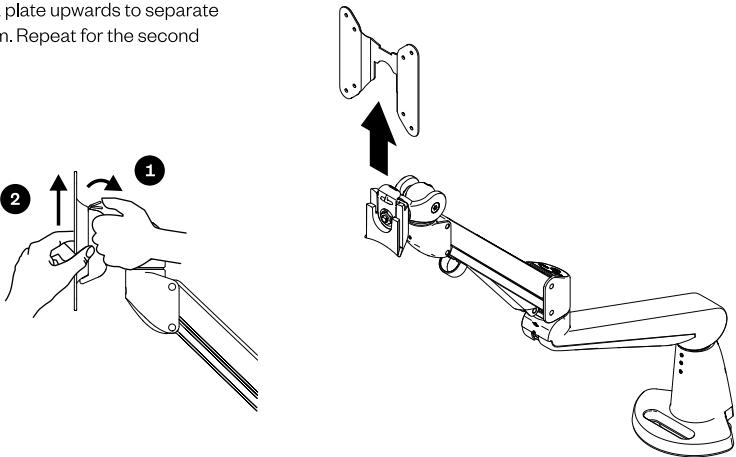
STEP 5

Place monitor face down on a flat surface.
Align the VESA plate holes with the holes
on the back of the monitor and attach
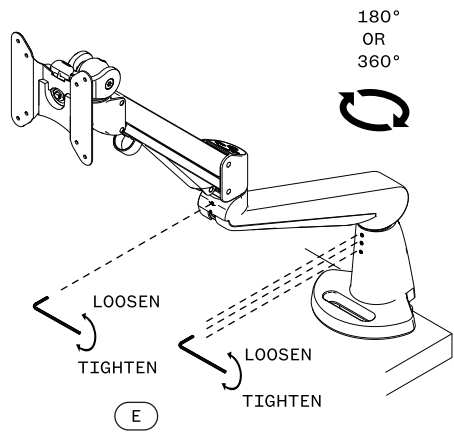using the screws for the desired monitor.

100
75
75
100

C

Upward
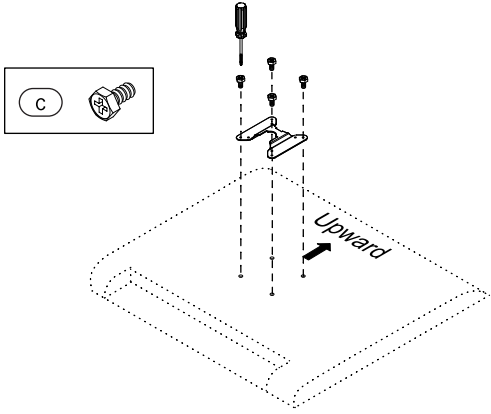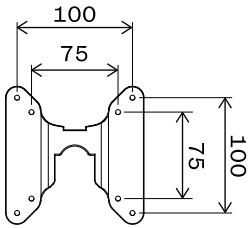
STEP 6

Use screwdriver to secure the screw.

D

Slide the monitor (with VESA plate) onto the arm and make
sure it "clicks" securely into position.

STEP 7

Unattach the cable collector and route the
cables through. Once satisfied, re-attach
the collector back into place.

2

1

Proceed by continuing the routing through
the cable clip.

TENSION ADJUSTMENTS AND ROTATION LOCK
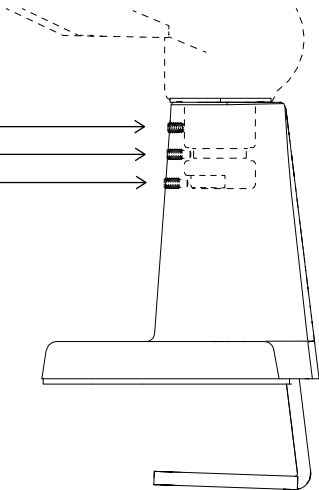
180°
OR
360°

LOOSEN

TIGHTEN

LOOSEN

TIGHTEN

E

Adjust the tension of the rotation to your
need by tighten or loosen the top screw.

To keep the arms completely rigid, fasten
the the top screw as tight as possible
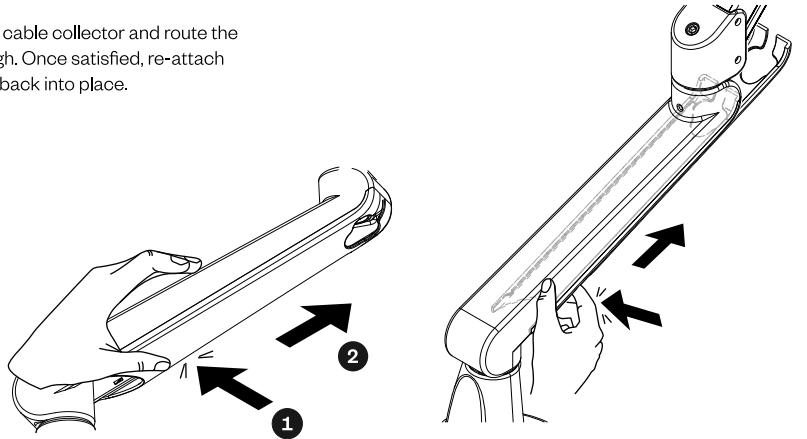while maintaning the intended position.

Fasten and loosen the middle
screw one revolution to prevent
the monitor arm from being
removed.

To limit the rotational movements to 180°:
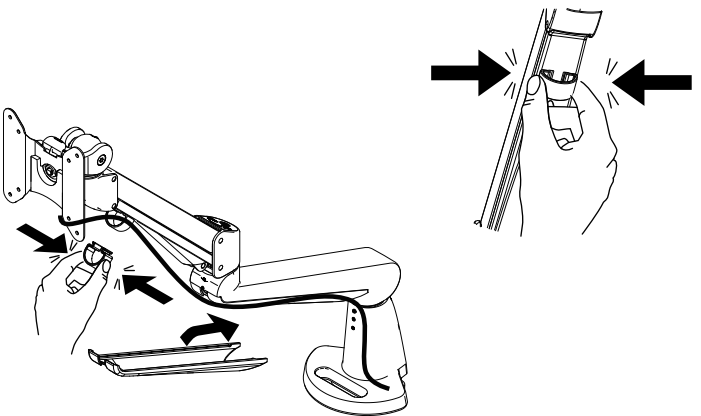Fasten the bottom screw and loosen one
revolution.

TENSION ADJUSTMENTS

TIGHTEN

LOOSEN

G

CAUTION:
Support and hold on to the arm while
adjusting the tension.

ADJUSTMENT:
Use the Allen key provided to adjust the
tension to correspond to the weight of the
desired monitor. Turn the Allen key (H)
counter-clockwise to adjust for heavier
monitors; clockwise for lighter monitors.
Once the adjustment is done, the monitor
should be experienced as
weightless and the monitor
should remain in any position
without dropping nor rising.

H

RECOMMENDATIONS:
• 3-8 kg (6.6-17.6 lbs).
• The products loading capacities are based
on monitors' center of gravity less than 3 cm
from the end of the VESA interface.
• Loading capacity could be reduced if the
monitor size is greater than 26 inches or if
the thickness exceeds 5.5 cm.
• All product specifications in catalogues are
subject to change without notice.
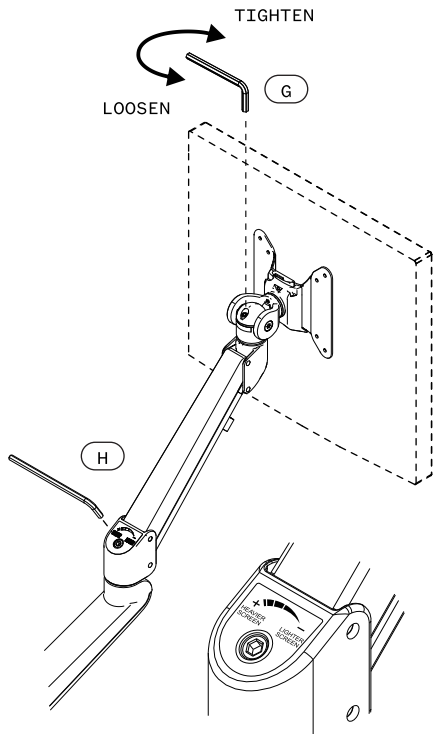
Allen keys can be stored on monitor arm